



FREECARS
COMMERCIAL VEHICLE

PRODUCT CATALOGUE

FREECARS(CHINA) COMPANY LIMITED

CONTACT: Alex Hsueh

ADDRESS: RM80 1-803, Goctic Centre, No.450, Huanshi East Road,
Yuxiu District GuangZhou City

WEBSITE: www.freecarsauto.en.alibaba.com
www.freecarsparts.en.alibaba.com

TEL: +86-20-84201892

Mob: +86-13922350422

+86-13002023915

EMAIL: freecars@163.com

sales@freecars.com.cn



CROSS REFERENCE LIST

Maker	OEM NO.	FCS NO.	Sachs	Monroe	ContiTech	Goodyear	Firestone
DAF							
	1265282 1285394 1321591 1353451 1353454 1371066	610001					
	1371065 1444147 1622211 1285393	610002					
IVECO							
	41019150 8169050	620001					
	41028764 41028763 500377878 500348793	620002	115743				
	500379698 5003077338 99438514 99455937 500352808 98472734	620003	115731				
	500357351	620004	310820				
	500340705	620005					
	500340706	620006					
	504060233	620007					
	500357352	620008	310821				

Maker	OEM NO.	FCS NO.	Sachs	Monroe	ContiTech	Goodyear	Firestone
	504060241	620009	311884				
MAN							
	81417226048 81417226051	630001	105855				
	81417226049 81417226052	630002	105856				
	81417226057 85417226006 85417226012	630003	135198				
	81 417226058 85417226007 85417226013 85417226024	630004	135199 135200				
	85417226008 85417226014 85417226022	630005	135194 135196				
	85417226009 85417226015 85417226023	630006	135195 135197				
	81417226075 85417226057	630007	313183				
	81417226058 81417226076	630008	313184				
	81417226056 81417226074	630009	313080				

Maker	OEM NO.	FCS NO.	Sachs	Monroe	ContiTech	Goodyear	Firestone
MERCEDES BENZ							
		640001			SZ35-11		
	A9428900219	640002					
	A9438900219		105409				
	9438903919		290997				
	9438903919		311189				
	9428900219		311189				
	9428906019						
	9428905219	640003					
	A9428905219		105408				
	9428905319	640004	105414				
	9429805919		290998				
	9438903819		311663				
	9428902919	640005					
	A9428902919		105392				
	9428906919						
	640006	640006	311664				
RENAULT							
	5010130797G	650001			SZ50-9		
	5010092916E	650002		650002	SZ50-8		
	501026845A	650003		CB0083	SZ50-10		
	5010313619A						
	5010629414	650004			SZ50-9 PO2		
	5010320096A	650005		CB0076	816-Z		
	5010491301	650006			SK86-10		

CROSS REFERENCE LIST

Maker	OEM NO.	FCS NO.	Sachs	Monroe	ContiTech	Goodyear	Firestone
	5010228908 5010228908A 5010228908B 5010228908C 5010316783A 5010269674 5010316783	650007	131041 310957		SZ36-10		
	5010228849	650008		69849 CB0070			
	5010615879	650009	25376537 781700001622				
	5010552241 7420898055 7482052893	650010		20898055			
SCANIA							
	1349840 1424228 1381904 1363122 1397396	660001	557001 290988 105872				
	1502468 1502474	660002		CB0074 717262778			
	1444016 1505563	660003	312465 310620				

CROSS REFERENCE LIST

Maker	OEM NO.	FCS NO.	Sachs	Monroe	ContiTech	Goodyear	Firestone
	1382827 1389840 1424229 1349844	660004	557001(Bellows) 105873(Shock Absorber) 290989(Shock Absorber)				
	1476415(Bellows) 1381919(Bellows) 1381904(Shock Absorber) 1397400(Shock Absorber) 1435859(Shock Absorber)	660005		CB0030(Bellows) CB0010(Shock Absorber)			
	1476415(Bellows) 1381919(Bellows) 1435856(Shock Absorber) 1382826(Shock Absorber) 1381906(Shock Absorber) 1382829(Shock Absorber) 1397392(Shock Absorber) 1397398(Shock Absorber)	660006		CB0030(Bellows) CB0009(Shock Absorber)			
	1331621 1117334 1116535 1314278 1331635	660007	112320 + 105876 105845 + 105875 105831 + 481002				

CROSS REFERENCE LIST

Maker	OEM NO.	FCS NO.	Sachs	Monroe	ContiTech	Goodyear	Firestone
	1424231 1505563 1502470 1502471 1502472 1502474 1595642	660008	310619 + 310620	CB0030 717262725			
VOLVO							
	1075076 1075077	670001		CB0002 717269602			
	1075444	670002		CB0038			
	1076855 20889138 3172985 3198850 20721167 21032337	670003					
	21165207	670004					
	20534645	670005			SZ130-25 P04		
	3172984 1629719 1629724	670006		CB0003 717269833			
	20427897 20721169	670007		CB0006 717269647			
	20453256 20889132-1	670008		CB0039 CB0055			

CROSS REFERENCE LIST

Maker	OEM NO.	FCS NO.	Sachs	Monroe	ContiTech	Goodyear	Firestone
	1089728	670009		CB0017			
	1594089						
	1593843						
	1089009	670010		CB0018			
	1622087	670011					
	1622087	670012	128024	CB0055			
HINO							
	52270-2253	680001					
		680002					
	6100201	680003					
	60913001						
	70303515	680004					
	70305D1						
	50893914	680005					
	7032701	680006					
	7032704						
	52270-1350	680007					
ISUZU							
	1-52110-142-1	680008					
	1-52110143-2	680009					
MITSUBISHI							
	MC056299	680010					
	MK493369	680011					
	ME096799	680012					
	MC053767	680013					
	MC056515						
	MK996372						
		680014					
FREIGHTLINER							

CROSS REFERENCE LIST

Maker	OEM NO.	FCS NO.	Sachs	Monroe	ContiTech	Goodyear	Firestone
		690001				1S5-040	
		690002				1S5-040	W02-358-7087
	18-29919-000	690003					W02-358-7206
		690004				1S5-005 1S4-008	
		690005				1S5-045	
KENWORTH							
	AS-5036 29-03200	690006					W02-358-7036
MACK							
	227QS312AM 227QS46AM 227QS46M ASB-08-5-146	690007				1S6-055	
OTHER VEHICLES							
		690008					W02-358-7207
	1102-0040 RIDE-RITE	690009				1S4-008	W02-358-7012
		690010			SZ51-7		
		690011			867Z		
		690012			SZ37-6	1S3-013	W02-358-3000
		690013					
		690014					

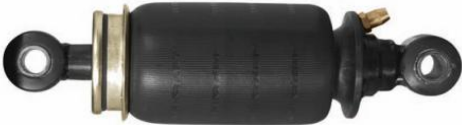


FREECARS
COMMERCIAL VEHICLE

Cabin and Seat Air Springs



Parts No.	Pictures	CAR MODEL/OEM NO.	Refer No.
DAF			
610001		<u>DAF</u> 1265282 1285394 1321591 1353451 1353454 1371066	
610002		<u>DAF</u> 1371065 1444147 1622211 1285393	
IVECO			
620001		<u>IVECO</u> 41019150 8169050	
620002		<u>IVECO</u> 41028764 41028763 500377878 500348793	<u>Sachs</u> 115743
620003		<u>IVECO</u> 500379698 500307338 99438514 99455937 500352808 98472734	<u>Sachs</u> 115731

Parts No.	Pictures	CAR MODEL/OEM NO.	Refer No.
620004		<u>IVECO</u> 500357351	<u>Sachs</u> 310820
620005		<u>IVECO</u> 500340705	<u>ARVINMARITOR</u> 908322985
620006		<u>IVECO</u> 500340706	<u>ARVINMARITOR</u> 908322986
620007		<u>IVECO</u> 504060233	<u>ARVINMARITOR</u> 908323140
620008		<u>IVECO</u> 500357352	<u>Sachs</u> 310821
620009		<u>IVECO</u> 504060241	<u>Sachs</u> 311884
MAN			
630001		<u>MAN</u> 81417226048 81417226051	<u>Sachs</u> 105855


Parts No.	Pictures	CAR MODEL/OEM NO.	Refer No.
630002		<u>MAN</u> 81417226049 81417226052	<u>Sachs</u> 105856
630003		<u>MAN</u> 81417226057 85417226006 85417226012	<u>Sachs</u> 135198
630004		<u>MAN</u> 81417226058 85417226007 85417226013 85417226024	<u>Sachs</u> 135200
630005		<u>MAN</u> 85417226008 85417226014 85417226022	<u>Sachs</u> 135194 、 135196
630006		<u>MAN</u> 85417226009 85417226015 85417226023	<u>Sachs</u> 135195 、 135197

Parts No.	Pictures	CAR MODEL/OEM NO.	Refer No.
630007		<u>MAN</u> 81417226075 85417226057	<u>Sachs</u> 313183
630008		<u>MAN</u> 81417226058 81417226076	<u>Sachs</u> 313184
630009		<u>MAN</u> 81417226056 81417226074	<u>Sachs</u> 313080
MERCEDES BENZ			
640001		<u>MERCEDES BENZ</u>	<u>Contitech</u> SZ35-11

Parts No.	Pictures	CAR MODEL/OEM NO.	Refer No.
640002		<u>MERCEDES BENZ</u> A9428900219 A9438903919 A9428906019 9438903919 9428900219 9428906019	<u>Sachs</u> 105409 290997 311189
640003		<u>MERCEDES BENZ</u> 9428905219 A9428905219	<u>Sachs</u> 105408
640004		<u>MERCEDES BENZ</u> 9428905319 9429805919 9438903819	<u>Sachs</u> 105414 290998 311663
640005		<u>MERCEDES BENZ</u> 9428902919 A9428902919 9428906919	<u>Sachs</u> 105392
640006		<u>MERCEDES BENZ</u> 9428906119	<u>Sachs</u> 311664

Parts No.	Pictures	CAR MODEL/OEM NO.	Refer No.
RENAULT			
650001		<u>RENAULT</u> 5010130797G	<u>Contitech</u> SZ50-9
650002		<u>RENAULT</u> 5010092916E	<u>Monroe</u> CB0082 <u>Contitech</u> SZ50-8
650003		<u>RENAULT</u> 501026845A 5010313619A	<u>Monroe</u> CB0083 <u>Contitech</u> SZ50-10
650004		<u>RENAULT</u> 5010629414	<u>Contitech</u> SZ50-9 PO2
650005		<u>RENAULT</u> 5010320096A	<u>Monroe</u> CB0076 <u>Contitech</u> 816-Z

Parts No.	Pictures	CAR MODEL/OEM NO.	Refer No.
650006		<u>RENAULT</u> 5010491301	<u>Contitech</u> SK86-10
650007		<u>RENAULT</u> 5010228908 5010228908A 5010228908B 5010228908C 5010316783A 5010269674 5010316783	<u>Sachs</u> 131041 310957 <u>Contitech</u> SZ36-10
650008		<u>RENAULT</u> 5010228849	<u>Monroe</u> 69849 CB0070
650009		<u>RENAULT</u> 5010615879	<u>Sachs</u> 25376537 781700001622
650010		<u>RENAULT</u> 5010552241 7420898055 7482052893	<u>Monroe</u> 20898055

Parts No.	Pictures	CAR MODEL/OEM NO.	Refer No.
SCANIA			
660001		<u>SCANIA</u> 1349840 1424228 1381904 1363122 1397396	<u>Sachs</u> 557001 290988 105872
660002		<u>SCANIA</u> 1502468 1502474	<u>Monroe</u> CB0074 717262778
660003		<u>SCANIA</u> 1444016 1505563	<u>Sachs</u> 312465 310620
660004		<u>SCANIA</u> 1382827 1389840 1424229 1349844	<u>Sachs</u> 557001(Bellows) 105873(Shock Absorber) 290989(Shock Absorber)
660005		<u>SCANIA</u> 1476415(Bellows) 1381919(Bellows) 1381904(Shock Absorber) 1397400(Shock Absorber) 1435859(Shock Absorber)	<u>Monroe</u> CB0030(Bellows) CB0010(Shock Absorber)

Parts No.	Pictures	CAR MODEL/OEM NO.	Refer No.
660006		<u>SCANIA</u> 1476415(Bellows) 1381919(Bellows) 1435856(Shock Absorber) 1382826(Shock Absorber) 1381906(Shock Absorber) 1382829(Shock Absorber) 1397392(Shock Absorber) 1397398(Shock Absorber)	<u>Monroe</u> CB0030(Bellows) CB0009(Shock Absorber)
660007		<u>SCANIA</u> 1331621 1117334 1116535 1314278 1331635 1331634 1348121 550365	<u>Sachs</u> 112320 + 105876 105845 + 105875 105831 + 481002
660008		<u>SCANIA</u> 1424231 1505563 1502470 1502471 1502472 1502474 1595642	<u>Sachs</u> 310619 + 310620 <u>Monroe</u> CB0030 717262725
VOLVO			
670001		<u>VOLVO</u> 1075076 1075077	<u>Sachs</u> CB0002 717269602

Parts No.	Pictures	CAR MODEL/OEM NO.	Refer No.
670002		<u>VOLVO</u> 1075444	<u>Monroe</u> CB0038
670003		<u>VOLVO</u> 1076855 20889138 3172985 3198850 20721167 21032337 21651229	
670004		<u>VOLVO</u> 21165207	
670005		<u>VOLVO</u> 20534645	<u>Contitech</u> SZ130-25 P04
670006		<u>VOLVO</u> 3172984 1629719 1629724	<u>Monroe</u> 717269833 CB0003
670007		<u>VOLVO</u> 20427897 20721169	<u>Monroe</u> 717269647 CB0006
670008		<u>VOLVO</u> 20453256 20889132-1	<u>Monroe</u> CB0039 + CB0055

Parts No.	Pictures	CAR MODEL/OEM NO.	Refer No.
670009		<u>VOLVO</u> 1089728 1594089 1593843	<u>Monroe</u> CB0017
670010		<u>VOLVO</u> 1089009	<u>Monroe</u> CB0018
670011		<u>VOLVO</u> 1622087	
670012		<u>VOLVO</u> 211119321	<u>Sachs</u> 128024 <u>Monroe</u> CB0055
HINO			
680001		<u>HINO</u> TRUCK CABIN SUSPENSION AIR SPRING (REAR) 52270-2253	
680002		<u>HINO</u> TRUCK CABIN SUSPENSION AIR SPRING (REAR)	
680003		<u>HINO</u> 6100201 60913001	

Parts No.	Pictures	CAR MODEL/OEM NO.	Refer No.
680004		<u>HINO</u> 70303515 70305D1	
680005		<u>HINO</u> AIR SPRING FOR 700 CABIN SUSPENSION (REAR) 50893914	
680006		<u>HINO</u> AIR SPRING FOR 700 CABIN SUSPENSION (FRONT) 7032701 7032704	
680007		<u>HINO</u> TRUCK CABIN SUSPENSION AIR SPRING (FRONT) 522701350	
ISUZU			
680008		<u>ISUZU</u> EXR370 CE97 TRUCK AIR SPRING (FRONT) 1-52110-142-1	
680009		<u>ISUZU</u> GIGA 1-52110143-2	

Parts No.	Pictures	CAR MODEL/OEM NO.	Refer No.
mitsubishi			
680010		<u>mitsubishi</u> FUSO AIR SPRING (FRONT) MC056299	
680011		<u>mitsubishi</u> FUSO AIR SPRING (FRONT) MK493369	
680012		<u>mitsubishi</u> AIR SPRING (FRONT) ME096799	
680013		<u>mitsubishi</u> FUSO SHOCK ABSORBER AIR SPRING (REAR) MC053767 MC056515 MK996372	
680014		<u>mitsubishi</u>	
FREIGHTLINER			
690001		<u>FREIGHTLINER</u>	<u>Goodyear</u> 1S5-040

Parts No.	Pictures	CAR MODEL/OEM NO.	Refer No.
690002		FREIGHTLINER FLD(1988 & Later)	Firestone W02-358-7087 Goodyear 1S5-040
690003		FREIGHTLINER Century Class & Argosy COE 2002 and earlier 18-29919-000	Firestone W02-358-7206
690004		FREIGHTLINER	Goodyear 1S5-005 1S4-008
690005		FREIGHTLINER	Goodyear 1S5-045
KENWORTH			
690006		KENWORTH AS-5036 29-03200	Firestone W02-358-7036
MACK			
690007		MACK 227QS312AM 227QS46AM 227QS46M ASB-08-F-146	Goodyear 1S6-055
OTHER VEHICLES			
690008			Firestone W02-358-7207

Parts No.	Pictures	CAR MODEL/OEM NO.	Refer No.
690009		LINK VANTAGE WHEEL CHAIR RIDE-RITE 1102-0040 RIDE-RITE	Firestone W02-358-7012 Goodyear 1S4-008
690010		PILOT AIR SPRING FOR DRIVER SEAT	Contitech SZ51-7
690011			Contitech 867Z
690012			Contitech SZ37-6 Firestone W02-358-3000 Goodyear 1S3-013
690013			
690014			